



“TX” Planter

FERTILIZER SOWING GUIDE

Rates listed in Kilograms per Hectare
(Sowing rates may vary due to gain weight variation).

1kg/hectare = .89 lbs/acre
 e.g. 28kg/hectare = 25lbs/acre
 1kg = 2.2lbs
 1ha = 2.47 acres

		Standard Super											
		11 to 51 Sprocket											
<i>Cast Gear Selection</i>	Driver	16*	30	32	34								
	Driven	62*	48	46	44								
	Rate	Kg/Ha.	15	38	41	48							
		11 to 38 Sprocket											
<i>Cast Gear Selection</i>	Driver	16*	30	32	34	36	38	40	42	44	46	48	
	Driven	62*	48	46	44	42	40	38	36	34	32	30	
	Rate	Kg/Ha.	21	53	57	64	68	75	83	91	102	113	121
		19 to 38 Sprocket											
<i>Cast Gear Selection</i>	Driver			30	32	34	36	38	40	42	44	46	48
	Driven			48	46	44	42	40	38	36	34	32	30
	Rate			Kg/Ha.	90	97	106	120	144	152	161	182	197
		38 to 38 Sprocket											
<i>Cast Gear Selection</i>	Driver			30	32	34	36	38	40	42	44	46	48
	Driven			48	46	44	42	40	38	36	34	32	30
	Rate			Kg/Ha.	174	193	219	243	263	273	303	315	348

		Granular Super											
		11 to 51 Sprocket											
<i>Cast Gear Selection</i>	Driver	16*	30	32	34								
	Driven	62*	48	46	44								
	Rate	Kg/Ha.	11	29	34	38							
		11 to 38 Sprocket											
<i>Cast Gear Selection</i>	Driver	16*	30	32	34	36	38	40	42	44	46	48	
	Driven	62*	48	46	44	42	40	38	36	34	32	30	
	Rate	Kg/Ha.	17	43	48	53	61	65	73	81	91	101	109

* 16 and 62 Gears ore Optional